

hponcfg

Configuring iLO through hponcfg on HP servers

```
wget https://downloads.linux.hpe.com/SDR/repo/mcp/Debian/pool/non-free/hponcfg-5.7.0-0.deb
dpkg -i hponcfg-5.7.0-0.deb
apt -f install
```

reset iLO password

iLO4_set_password.xml

```
<RIBCL VERSION="2.0">
  <LOGIN USER_LOGIN="x" PASSWORD="x">
    <USER_INFO MODE="write">
      <MOD_USER USER_LOGIN="Administrator">
        <PASSWORD value="pa$$word"/>
      </MOD_USER>
    </USER_INFO>
  </LOGIN>
</RIBCL>
```

```
$ sudo hponcfg -f iLO4_set_password.xml
```

HPE Lights-Out Online Configuration utility
Version 5.7.0 Date 12/30/2021 (c) 2005,2021 Hewlett Packard Enterprise
Development LP
Firmware Revision = 2.78 Device type = iLO 4 Driver name = hpilo
Script succeeded

From:

<https://niziak.spox.org/wiki/> - niziak.spox.org

Permanent link:

<https://niziak.spox.org/wiki/hw:server:proliant380eg8:hponcfg>

Last update: 2023/02/08 10:10

