

# P822 firmware update

Download .rpm file from

[https://support.hpe.com/connect/s/software/details?language=pl&softwareId=MTX\\_42b6aa58956a438aa85bd73d0f](https://support.hpe.com/connect/s/software/details?language=pl&softwareId=MTX_42b6aa58956a438aa85bd73d0f)

Unpack /hp-firmware-smartarray-46a4d957a7-8.32-1.1 from RPM.

Run:

```
~/hp-firmware-smartarray-46a4d957a7-8.32-1.1# ./hpsetup
Supplemental Update / Online ROM Flash Component for Linux (x64) - Smart
Array P220i, P222, P420i, P420, P421, P721m, and P822 (8.32), searching...
1) Smart Array P822 Smart Array P822 in Slot 2 (8.00)
Select which devices to flash [#,#-#, (A)ll, (N)one]> 1
Flashing Smart Array P822 in Slot 2 [ 8.00 -> 8.32 ]
Deferred flashes will be performed on next system reboot
===== Summary =====
Smart Component Finished

Summary Messages
=====
Reboot needed to activate 1 new FW image

Exit Status: 1
Deferred flashes will be performed on next system reboot
A reboot is required to complete update.
```

From:

<https://niziak.spox.org/wiki/> - niziak.spox.org

Permanent link:

<https://niziak.spox.org/wiki/hw:server:proliant380eg8:p822:fwupdate>

Last update: 2023/08/04 12:00

