

# ssacli

Source: [HPE Storage Controller Management \(ssacli\)](#)

```
ssacli controller slot=2 show
ssacli controller slot=2 show config
ssacli ctrl all show status

# Show all physical drives
ssacli ctrl slot=2 pd all show
ssacli ctrl slot=2 pd all show detail

# Show all logical drives
ssacli ctrl slot=2 ld all show
ssacli ctrl slot=2 ld all show detail

# Show arrays
ssacli ctrl slot=2 array all show detail
```

## rescan for new drives

```
ssacli rescan
```

## cache ratio

Default cache ratio is: Cache Ratio: 10% Read / 90% Write

To set new cache ratio (read/write): ssacli ctrl slot=2 modify cacheratio=50/50

## disable physical drive write cache

```
ssacli ctrl slot=2 modify dwc=disable
```

## rebuild priority

Set high rebuild priority: ssacli ctrl slot=2 modify rp=high

Show rebuild priority: ssacli ctrl slot=2 modify rp=?

# switch to HBA mode

```
ssacli ctrl slot=2 ld all delete  
ssacli controller slot=2 modify hbemode=on
```

## RAID5

```
# Create  
ssacli ctrl slot=2 create type=ld drives=5I:1:4,5I:1:9,5I:1:12 raid=5  
stripsize=1024  
  
# Add 2 more drivers:  
ssacli ctrl slot=2 ld all show  
ssacli ctrl slot=2 pd all show  
ssacli ctrl slot=2 ld 2 add drives=5I:1:7,5I:1:10  
  
ssacli ctrl slot=2 array B show detail  
  
# Resize ld 2 to max size  
ssacli ctrl slot=2 ld 2 modify size=max  
ssacli ctrl slot=2 array B show detail  
  
# Force Linux to detect size change:  
echo 1 > /sys/class/scsi_disk/0\:1\:0\:1/device/rescan  
  
# echo 1 > /sys/block/sdb/device/rescan  
# partprobe /dev/sdb
```

From:  
<https://niziak.spox.org/wiki/> - **niziak.spox.org**



Permanent link:  
<https://niziak.spox.org/wiki/hw:server:proliant380eg8:ssacli>

Last update: **2021/10/10 20:46**